



NO.	DESCRIPTION	NO.	DESCRIPTION
1	SAFETY CURTAIN	65	NO.8 TOWER LIGHT
2	MAIN CURTAIN	66	NO.1 TOMENTAL
3	NO.1 DRAW CURTAIN	67	NO.2 TOMENTAL
4	NO.0 FLY SET BATTEN	68	No.1 APRON LIGHT BATTEN
5	NO.1 TOP LIGHT BRIDGE	69	PLACARD BATTEN
6	NO.1 FLY SET BATTEN	70	No.2 APRON LIGHT BATTEN
7	NO.1 UPPER SOUND REFLECTION BOARD	71	No.1 BACK STAGE SUSPENSION LIGHT BATTEN
8		72	No.2 BACK STAGE SUSPENSION LIGHT BATTEN
9	NO.2 FLY SET BATTEN	73	No.3 BACK STAGE SUSPENSION LIGHT BATTEN
10	NO.3 FLY SET BATTEN	74	NO.1 BACK STAGE FLY SET BATTEN
11	NO.2 DRAW CURTAIN	75	NO.2 BACK STAGE FLY SET BATTEN
12	NO.4 FLY SET BATTEN	76	NO.3 BACK STAGE FLY SET BATTEN
13	NO.5 FLY SET BATTEN		HOIST
14	NO.2 TOP LIGHT BRIDGE		
15	NO.6 FLY SET BATTEN	NO.	DESCRIPTION
16	NO.7 FLY SET BATTEN	77	ORCHESTRA LIFT
17	NO.8 FLY SET BATTEN	78	STAGE LIFT
18	NO.2 UPPER SOUND REFLECTION BOARD	79	STAGE LIFT
19	NO.3 DRAW CURTAIN	80	STAGE LIFT
20	NO.9 FLY SET BATTEN	81	SMALL SUB SINKING & TILTING STAGE
21	NO.10 FLY SET BATTEN	82	SMALL SUB SINKING & TILTING STAGE
22	NO.11 FLY SET BATTEN	83	SMALL SUB SINKING & TILTING STAGE
23	NO.3 TOP LIGHT BRIDGE	84	SMALL SUB SINKING & TILTING STAGE
24	NO.12 FLY SET BATTEN	85	SMALL SUB SINKING & TILTING STAGE
25	NO.13 FLY SET BATTEN	86	SMALL SUB SINKING & TILTING STAGE
26	NO.14 FLY SET BATTEN	87	SMALL SUB SINKING & TILTING STAGE
27	REAR SCREEN BATTEN	88	SMALL SUB SINKING & TILTING STAGE
28	NO.15 FLY SET BATTEN	89	SMALL SUB SINKING & TILTING STAGE
29	NO.3 UPPER SOUND REFLECTION BOARD	90	SMALL SUB SINKING & TILTING STAGE
30	NO.4 DRAW CURTAIN	91	SMALL SUB SINKING & TILTING STAGE
31	NO.1 BORDER LIGHT BATTEN	92	SMALL SUB SINKING & TILTING STAGE
32	NO.1 SUSPENSION LIGHT BATTEN	93	SMALL SUB SINKING & TILTING STAGE
33	NO.16 FLY SET BATTEN	94	SMALL SUB SINKING & TILTING STAGE
34	FRONT SOUND REFLECTION BOARD	95	SMALL SUB SINKING & TILTING STAGE
35	NO.17 FLY SET BATTEN	96	SMALL SUB SINKING & TILTING STAGE
36	NO.18 FLY SET BATTEN	97	SMALL SUB SINKING & TILTING STAGE
37	NO.19 FLY SET BATTEN	98	SMALL SUB SINKING & TILTING STAGE
38	NO.5 DRAW CURTAIN	99	SMALL SINKING STAGE
39	NO.2 BORDER LIGHT BATTEN	100	SMALL SINKING STAGE
40	NO.2 SUSPENSION LIGHT BATTEN	101	SMALL SINKING STAGE
41	NO.20 FLY SET BATTEN	102	SMALL SINKING STAGE
42	NO.21 FLY SET BATTEN	103	SMALL SINKING STAGE
43	NO.22 FLY SET BATTEN	104	SMALL SINKING STAGE
44	NO.23 FLY SET BATTEN	105	WAGON SINKING STAGE
45	NO.24 FLY SET BATTEN	106	WAGON SINKING STAGE
46	UPPER HORIZONTAL LIGHT BATTEN	107	WAGON SINKING STAGE
47	NO.25 FLY SET BATTEN	108	WAGON SINKING STAGE
48	NO.26 FLY SET BATTEN	109	WAGON SINKING STAGE
49	NO.6 DRAW CURTAIN	110	WAGON SINKING STAGE
50	HORIZONTAL CURTAIN (WHITE)	111	WAGON STAGE
51	HORIZONTAL CURTAIN (BLACK)	112	WAGON STAGE
52	NO.1 SIDE SOUND REFLECTION BOARD	113	WAGON STAGE
53	NO.2 SIDE SOUND REFLECTION BOARD	114	WAGON STAGE
54	NO.3 SIDE SOUND REFLECTION BOARD	115	WAGON STAGE
55	NO.4 SIDE SOUND REFLECTION BOARD	116	WAGON STAGE
56	NO.5 SIDE SOUND REFLECTION BOARD	117	LARGE SINKING STAGE
57	NO.6 SIDE SOUND REFLECTION BOARD	118	TURNTABLE WAGON
58	NO.1 TOWER LIGHT	119	TURNTABLE
59	NO.2 TOWER LIGHT	120	TURNTABLE WAGON SINKING
60	NO.3 TOWER LIGHT	121	BOTTOM FLOOR RECEIVER
61	NO.4 TOWER LIGHT	122	BOTTOM FLOOR RECEIVER
62	NO.5 TOWER LIGHT	123	BOTTOM FLOOR RECEIVER
63	NO.6 TOWER LIGHT	124	BOTTOM SINKING
64	NO.7 TOWER LIGHT	125	BOTTOM WAGON

Scale : 1/200

어울림극장 무대단면도

410-020 경기도 고양시 덕양구 어울림로 33
 TEL : 031-960-9662 FAX : 031-960-9669

SCALE

1:150

DESIGNER

REMARK

TITLE

DATE

PRODUCTION